

FLEET AND TELEMATICS

UTILIZATION

1. Navigate to the **Fleet and Telematics** section.
2. Click on a piece of equipment from the map or from the list on the right of the screen.
3. On the Equipment Summary page, you will see **Utilization**.
4. Click **See All** for a detailed view of the equipment utilization metrics.
5. Filter display metrics from today, last 5 days, last 7 days, or select date, along with the option to check a box to exclude weekends.
6. The following utilization metrics are shown (when applicable):
 - a. Last Start
 - b. Utilization Percentage based on day(s) selected
 - c. Engine Hours
 - d. Engine Idle Hours
 - e. Hours Used
 - f. Total Mileage
 - g. Usage Timeline